

*These Installation Instructions Apply  
To The Following Light Kit Models:*



## *Light Kit Installation Instructions*

### *#372 Triple Lights*

**CAUTION:** If there are Compact Fluorescent Lamps (CFLs) included in this package, do not operate them by any type of variable control (dimmer, remote or wall control).  
Use Only On/Off Type Switches With CFLs.

*For use with the following ceiling fan models:*

54CD5	714S-G
8920	HC-1990CD
HC-1992DA	HC-1990EM
HC-1993OS	HC-52-2000
HC-1930	HP2132
HC-1131	HF-3221

Light Kit Weight

**READ AND SAVE THESE INSTRUCTIONS**

**TO AVOID RISK OF FIRE OR ELECTRIC SHOCK,  
TURN OFF THE POWER AT THE SOURCE!  
ALL ELECTRICAL CONNECTIONS MUST BE IN ACCORDANCE  
WITH LOCAL AND NATIONAL ELECTRICAL CODES!**

**CAUTION:** To reduce the risk of fire or electrical shock, the light kit should only be used with Gulf Coast Fans/Dan's Fan City ceiling fan models.

Before starting installation, disconnect the power by turning off the circuit breaker or removing the fuse at the fuse block. Turning off power using fan switch (speed control, on/off) is not sufficient to prevent electrical shock.

1. Remove all of the parts from package.

2. Remove the Switch Cup from the fan, if it is already assembled. There are three screws around the upper portion of the cup holding it in place; you may need to remove them all or only remove one and loosen the other two depending on the design of the switch cup. Disengage the wire connector. Fig 1.

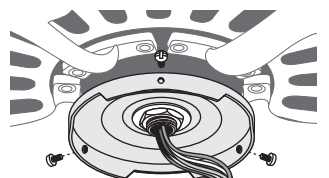


FIG 1

Remove Fan's Switch Cup

3. Remove the center screw/plug from the center hole of the switch cup. Also Fig 1.

4. Feed both of the light kit wires through the center hole together and up through the middle of the wiring and components. While keeping the light kit's wires from twisting, thread the switch cup onto the light kit until it is snug.

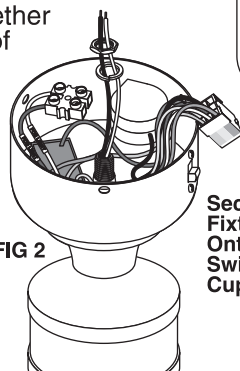


FIG 2

Remove Center Screw or Plug

5. Feed both of the light kit wires through the split washer and nut provided. Thread these onto the light kit's threaded post and tighten securely. Fig 2.

Secure Fixture Onto Switch Cup

6. Identify the "Terminal Block", the small plastic connector where the fan's blue and white wires end, marked "For Light". This is where the light kit's wires will connect. Also identify the small screwdriver tool provided to secure the wires into the Terminal Block.

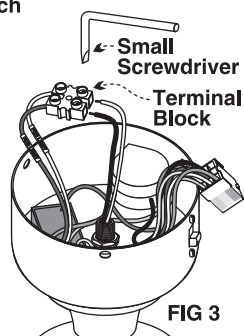


FIG 3

7. Insert the light kit's Black wire into the port in the Terminal Block in-line with the fan's Blue wire. Using the small screwdriver tool, tighten the tiny screw in the terminal block against the bare end of the wire to secure it. Insert the light kit's White wire into the remaining open port of the terminal block and tighten the screw to secure the wire end. Make sure these set screws are tight enough to prevent the wires from coming loose.

8. Reattach the wire connector of the switch cup to the fan. The connector is color coded and notched to fit only one way. Fig 4

9. Reattach the switch cup to the fan using the three screws loosened and/or removed earlier.


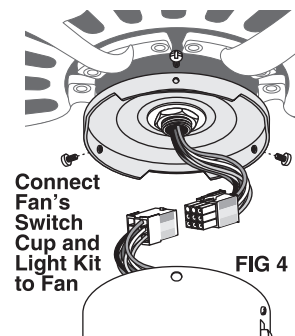



FIG 4

**CAUTION:** To prevent damage or personal injury, the included Compact Fluorescent Lamps (CFLs) should not be operated by any type of variable control (dimmer, remote or wall control).

10. Remove the Retaining Rings from the sockets.

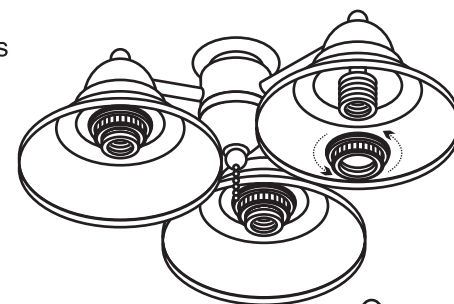

11. a. Raise each Glass shade into place and secure each with a Retaining Ring.

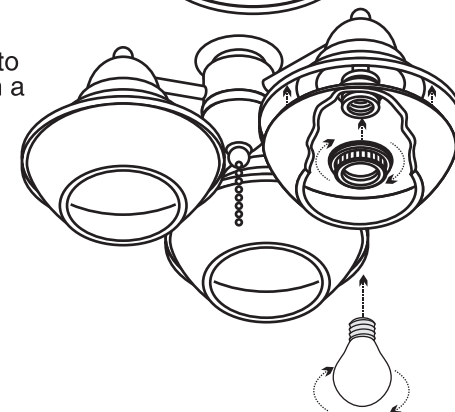

b. Install the bulbs.

12. Attach the pull chain knob to the pull chain. Fig 6.  
Turn the power source back on, and you are done.  
Pull the light kit's pull chain to turn on and off.

FIG 6

*Note: if the light does not turn on, check that the blue wire at the top of the fan (in the canopy) is connected to the power source.*

Portions © 1993 Gulf Coast Fans, Inc

Portions © 1993 Gulf Coast Fans, Inc